FCS-4F datasheet

1. Description:

- •It is used for different kinds of modules and applied to the working area subsystem.
- •It uses embedded surface frame, easy to install and disassemble, it is with protective door and dusty free, can do OEM for any customers and print requested LOGO.
- •With application of fiber SC/LC simplex, duplex and other different environment installed plate or flush plate. All modules can be configured on customer's choice.
- Cable management can be connected without cutting(with express port)
- •All modules are free of welding.

2. Working area:

- •The telecommunication network, metropolitan area network, optical fiber communication system.
- •Optical testing equipment/instrument.
- •CATV optical fiber, optical fiber sensor.
- •Optical fiber broadband access network, FTTH optical fiber.
- •Optical fiber distribution frame, frame type and wall type optical fiber distribution unit.

3. Performance index:


Item	Technical data		
Application	3.0 x 2.0 mm drop cable or indoor cable		
Fiber diameter	125μm (652 & 657)		
Tight cladding diameter	250μm & 900μm		
Mode of application	Single mode & duplex mode		
Tensile strength	>50 N		
End-use temperature	-40∼+85°C		
Adaptor	SC & LC		
Insertion loss	≤0.2dB(1310nm & 1550nm)		
output	4		


4. Configuration table:

Table 1 Model and configuration

FCS-4F datasheet

Mode1	Size (Pic 1)	Max Capacity			Installation Size(Pic 2)
	A*B*C (mm)	SC	LC	PLC	D (mm)
FCS-4F	100.6*80.6*28.8	4	8	8	78

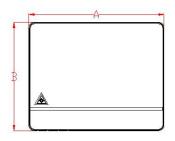

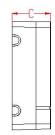





Pic 1 Box Size

Pic 2 Installation Size

5. Product inside structure and cable ways:

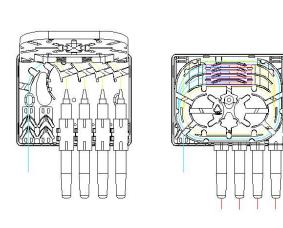

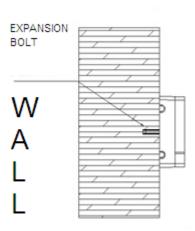

Pic 3 Cable ways

Pic 4 Wall-mounted installation

6. Installation:

1. Wall-mounted installation

Drill 2 holes over the wall based on the size in table 1, place the expansion

FCS-4F datasheet

bolt Φ 5.5*30, place the box to match up the holes and use bolt to fasten. (see Pic 4)

7. Accessories:

- 1. User Manual*1.
- 2. Accessories Bag * 1